

# Service Tips from the Pros



brought to you by our friends at Farm & City Insurance Services



## Retrofit the SCS Keyless Entry System to the Tri-Mark Keyless Entry System.

The supplier of the SCS Keyless Entry Systems closed their doors at the end of 2009, original equipment parts are no longer available for this system. Winnebago Industries started using the Tri-Mark Systems in January of 2010. The intent of this article is to give you the information needed to convert to the newer system should the need arise.

Motor homes previously equipped with SCS Keyless Entry & Cargo Lock System (#151458-01-000) or Keyless Entry Only System (#151458-03-000), contain keyless systems that are no longer serviceable. If the module, the keypad or the key fob fails, a new Tri-Mark Keyless Entry System will need to be installed to regain full functionality of the system.

A Winnebago Industries dealer can look into this for you and order/install the correct components. However, if you'd like to investigate on your own, you can use our on-line parts catalog to identify which system is installed on your coach. Use the following link to access our on-line parts catalog; <http://dealer.winnebagoind.com/unitsearch/parts.htm>. Once on the site you will need to select your model year coach and enter the last 5 digits of your Winnebago Industries coach serial number, then click on the search tab. This will open a window that shows all of the Winnebago Industries installed parts on your coach. You can open a new search box by using the 'CTRL' & 'F' key on your keyboard. By entering the 151458 # into the search box, you can identify which system is installed on your RV. If this doesn't yield any results, try the 176367 #, if this system is on your coach, original equipment parts are readily available through our dealer network.

The following parts are required to properly retrofit the Tri-mark Keyless Entry System as a replacement for the SCS systems:

#151458-01-000 Original SCS System; required parts are listed below.

#176367-01-000 Tri-Mark Keyless Entry & Cargo Lock System


#176356-01-000 Wire Assembly Keyless Entry & Cargo Lock

#063912-02-000 Relay (2 required)

#151458-03-000 Original SCS System; required parts are listed below.

#176367-02-000 Tri-Mark Keyless Entry Only

#176356-02-000 Wire Assembly Keyless Entry Only

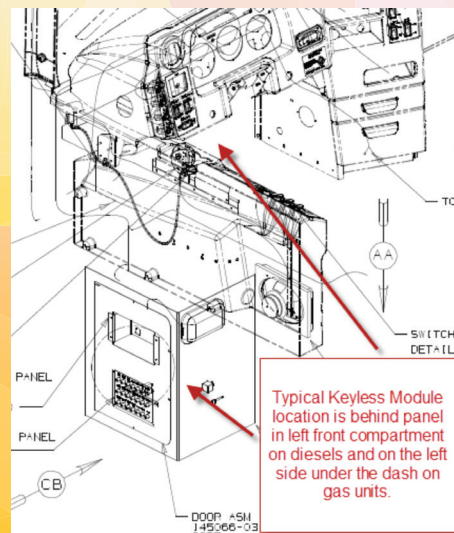

### Both systems include 2 key fobs.

If equipped with an SCS keypad # 151458-02-000, (mounted to the left of the entry door), you will need the Tri-Mark compatible keypad, order the #176367-01-700 kit.

The #176367-01-700 kit contains the keypad, gasket, and wire harness. The wire harness plugs directly into the Tri-Mark Keyless Entry Module. It is necessary to run the new wire harness from the control module, (mounted in the left front compartment), to the keypad near the entry door. As the new keypad is somewhat smaller, some painting may be required.

Coaches built prior to the spring of 2004 may have an older version of the SCS system, 102756-01-000 or 102756-03-000. These systems did not have the same connectors. The new Tri-Mark systems will work as replacements however the upgrade will require 'hard wiring' the components to existing harnesses. We recommend that you consult with a dealer if this level of service is required.